



PIPE


APPLY A 1 - 1/4" PIECE OF VAPORGUARD TAPE ONTO PIPE LEAVING RELEASE LINER IN THE BUTYL

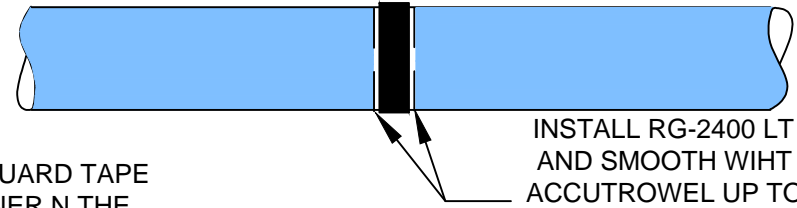


INSTALL RG-2400 LT AND SMOOTH WITH ACCUTROWEL UP TO RELEASE LINER

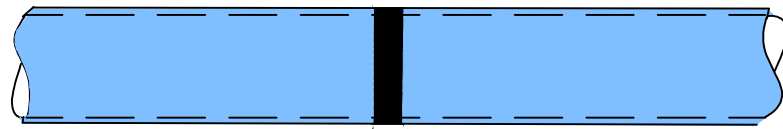


REMOVE RELEASE LINER AND SMOOTH RG UP TO BUTYL

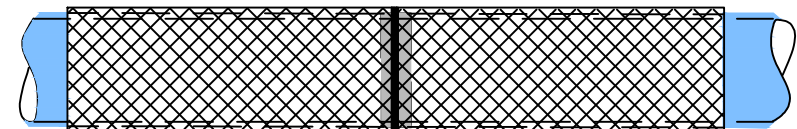


INSTALL INSULATION WITH JOINT CENTERED ON VAPORGUARD

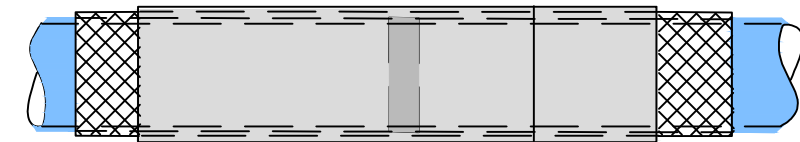

INSTALL VAPOR BARRIER OVER INSULATION MAKE SURE NO JOINT ALIGN WITH THE JOINT UNDER IT

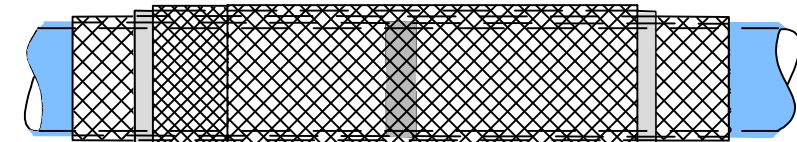

INSTALL MECHANICAL JACKET OVER VAPOR BARRIER MAKE SURE NO JOINT ALIGNS WITH THE JOINT UNDER IT

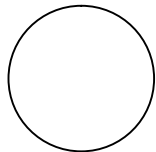

SECTION @ VAPORGUARD VAPOR STOP DETAIL

© POLYGUARD PRODUCTS, INC.
MATERIALS SEPARATED FOR CLARITY

Polyguard Products, Inc.
P.O. Box 755 - Ennis, TX 75119
Phone: 214-515-5000 Fax: 972-875-9425
Web Site - www.polyguardproducts.com

Polyguard[®]
Innovation based. Employee owned. Expect more.

<p>The information provided is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all data sheets, statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us.</p>	NOT TO SCALE
	EFFECTIVE DATE: 03/07/14
	SUPERCEDES: 03/07/2012